Axelent Product Information

» X-Guard® X-Roll-Up



X-Guard® X-Roll-Up

Axelent's X-Roll-up is an excellent versatile alternative to doors where only a partial opening is required. For the implementation at manual workstations X-Roll-up is an ideal application for an effective and economical solution.

The manual roller door consists of a modular system with integrated spring loaded shaft and is available as standard in three widths and two heights. X-Roll-up wraps the aluminium rolling door during opening onto a shaft in the box at the top.


X-Roll-up is offered like a kit (including mounting material). Posts and wall section needs to be ordered separately. Integration into the X-Guard system is easy.



Axelent Product Information

» X-Guard® X-Roll-Up

Technical Data			
Art. no.	Description	Width kit (incl. posts)	Width Rollerdo
S-0145-15	X-Roll-up Rollerdoor vertical, W:800 mm post H:2000 mm	930 mm	830 mm
S-0145-16	X-Roll-up Rollerdoor vertical, W:1000 mm post H:2000 mm	1130 mm	1030 mm
S-0145-17	X-Roll-up Rollerdoor vertical, W:1200 mm post H:2000 mm	1330 mm	1230 mm
S-0145-18	X-Roll-up Rollerdoor vertical, W:800 mm post H:2300 mm	930 mm	830 mm
S-0145-19	X-Roll-up Rollerdoor vertical, W:1000 mm post H:2300 mm	1130 mm	1030 mm
S-0145-20	X-Roll-up Rollerdoor vertical, W:1200 mm post H:2300 mm	1330 mm	1230 mm

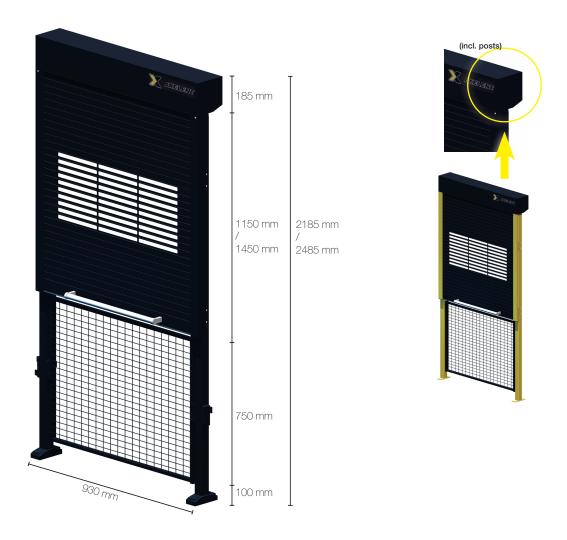

Heights: 2000 mm (2185 mm incl. top box) and 2300 mm (2485 mm incl. top box). Available in RAL 9011 (other colours available upon request).

